


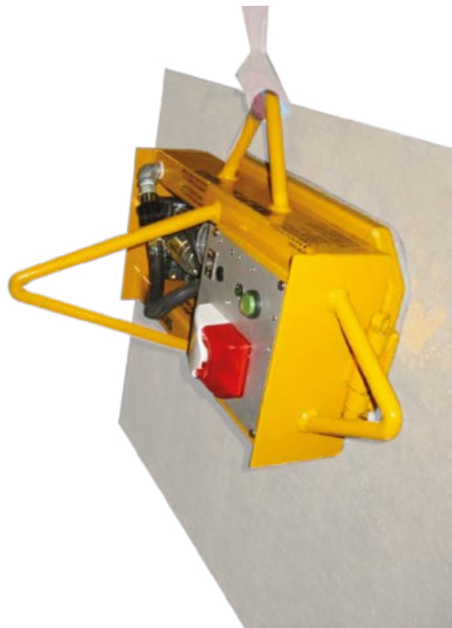

OPERATOR MANUAL

STONE LIFTER

SK200



Northern (Head Office)
Tel: +44 (0)1482 227333

Central
Tel: +44 (0)1302 341659

Western
Tel: +44 (0)1384 900388

Southern
Tel: +44 (0)203 174 0658

CONTENTS:

1 GENERAL

1.1 LIFTING SPECIFICATION

1.1.1 LOAD SPECIFICATION

1.1.2 CONDITIONS

1.2 SAFETY GUIDELINES

2 INSTALLATION INSTRUCTIONS

2.1 FITTING BATLIFT

2.2. SUCTION PADS

3 DIRECTIONS FOR USE

3.1 GENERAL

3.2 OPERATING PROCEDURE

3.3 DISCONNECTING

4 MAINTENANCE

4.1 DAILY

4.2 WEEKLY

4.3 MONTHLY

5 TROUBLE SHOOTING

5.1 VACUUM SYSTEM

5.2 ELECTRICAL SYSTEM

ENCLOSURES

- SPECIFICATION SHEETS

- VACUUM PUMP PARTS

- TEST CERTIFICATE

- CE CERT

1. GENERAL

PLEASE NOTE THAT THE MANUFACTURER DISCLAIMS ANY RESPONSIBILITY FOR MATERIAL DAMAGE OR PERSONAL INJURY CAUSED BY IMPROPER USE OF THIS BATLIFT. THE OPERATOR MUST READ THIS MANUAL BEFORE USING THE DEVICE.

1.1. LIFTING SPECIFICATION

THE VACUUM LIFTING DEVICE IN COMBINATION WITH THE SUPPLIED SUCTIONPADS IS ONLY SPECIFIED FOR LIFTING OF THE MATERIALS SPECIFIED BELOW. THE LIFTER IS NOT SUITABLE FOR USE WITHIN HAZARDOUS/EXPLOSIVE ATMOSPHERES.

1.1.1 LOAD SPECIFICATION

A 300 KG CAPACITY BATLIFT SYSTEM TO LIFT CONCRETE/STONE SLABS OR STEEL PLATES / SECTIONS WITH CRANE OR MINI-DIGGER:

LENGTH : MIN 500 MM WIDTH : MIN 300 MM
THICKNESS: VARIABLE MAX WEIGHT: 300 KGS/200KG SIDELIFT

SURFACE : FREE FROM DETRITUS THAT COULD IMPEDE EFFECTIVE SEALING, NO EXTREME IRREGULARITIES, GREASE OIL OR ANY CONTAMINANTS.
OPERATING TEMPERATURE : -20 TO 60 DEG. C
MAX. LIFT INCLINATION: TO 90 DEG. FROM HORIZONTAL

1.1.2 CONDITIONS

AMBIENT TEMP.: UP TO 40 DEG. C.
HOIST ACCELERATION : MAX 1 MS⁻² LIFTING OR LOWERING

1.2 OPERATING SAFETY GUIDELINES

1.2.1 TRAINING

ENSURE THAT THE MACHINE IS ONLY OPERATED BY PERSONNEL WHO HAVE BEEN SATISFACTORILY TRAINED IN THE USE OF THE MACHINE AND FULLY UNDERSTAND THE OPERATING SAFETY GUIDELINES PRESENTED BELOW.

1.2.2 ALARM SYSTEM

THE MACHINE IS FITTED WITH AN AUDIBLE AND VISUAL ALARM INDICATION SYSTEM WHICH COMPRISES:

- 1 RED INDICATOR LAMP - VISUAL INDICATION OF VACUUM LEVEL BELOW 60%
- 1 AUDIBLE ENUNCIATOR - AUDIBLE INDICATION OF VACUUM LEVEL BELOW 60%

WITH THE MACHINE SWITCHED ON THE ALARM SYSTEM WILL ANNUNCIATE A LOW VACUUM ALARM CONDITION IF THE VACUUM LEVEL IS INITIALLY BELOW 60% OR SHOULD DROP BELOW 60%

TO TEST THE ALARM SYSTEM, ENSURE THAT THE STORED VACUUM RESERVOIR IS REDUCED TO ZERO - SWITCH ON THE MACHINE, THE ALARM SYSTEM WILL OPERATE UNTIL THE VACUUM LEVEL ACHIEVED IS ABOVE 60% - AT THIS POINT THE ALARM ANNUNCIATION WILL STOP AND THE SYSTEMS O.K. INDICATOR LAMP WILL ILLUMINATE. IF THE ALARM SYSTEM DOES NOT OPERATE AS DESCRIBED DO NOT USE THE MACHINE AND REPORT THE DEFECT IMMEDIATELY.

THE ALARM SYSTEM IS TO BE TESTED ON A DAILY BASIS BEFORE THE COMMENCEMENT OF LIFTING OPERATIONS.

DO NOT ATTEMPT TO LIFT A LOAD WITHOUT THE MACHINE SWITCHED ON IT IS DANGEROUS TO ATTEMPT TO LIFT A LOAD USING RESIDUAL VACUUM HELD WITHIN THE VACUUM RESERVOIR.

1.2.4 VACUUM GAUGE

THE MACHINE IS FITTED WITH A VACUUM GAUGE WHICH INDICATED THE LEVEL OF VACUUM ACHIEVED, THE GAUGE IS CALIBRATED FROM 0-100%. THE SCALING ON THE GAUGE HAS A SECTOR COLOURED GREEN FROM 40 - 70%, THIS INDICATES THE VACUUM LEVEL REQUIRED TO LIFT A MAXIMUM PERMISSIBLE LOAD OF 300 KGS.

WHEN OPERATING THE VACUUM UNIT THE OPERATOR MUST HAVE A CLEAR VIEW OF THE VACUUM GAUGE AS THIS WILL GIVE AN EARLY INDICATION IN THE EVENT OF AN ABNORMAL DECREASE IN THE VACUUM LEVEL.

1.2.5 LIFTING OPERATIONS

DURING NORMAL OPERATION THE MACHINE MAY BE USED TO LIFT LOADS OF UP TO 300 KG WHEN THE MACHINE HAS ACHIEVED A VACUUM LEVEL OF 60% OR ABOVE AS INDICATED BY THE VACUUM GAUGE. THE OPERATOR MUST HAVE CLEAR

UNOBSTRUCTED VIEW OF THE VACUUM GAUGE TOGETHER WITH THE RED AND GREEN LAMPS.

DO NOT ATTEMPT TO LIFT A LOAD OF 300 KGS IF THE VACUUM GAUGE INDICATES LESS THAN 60%, OR IF AN ALARM CONDITION IS ANNUNCIATED

IF, WHIST LIFTING LOAD THE VACUUM LEVEL DROPS BELOW 60% OR AN ALARM CONDITION IS ANNUNCIATED , LOWER THE LOAD TO A SAFE POSITION IMMEDIATELY.

1.2.6 S.W.L.

THE MAXIMUM LIFTING CAPACITY IS INDICATED ON THE LIFTING DEVICE. ON THE SUCTION PADS THE MAXIMUM LIFTING CAPACITY IS ALSO INDICATED. THE MINIMUM S.W.L. VALUE SHOWN IS THE MAXIMUM S.W.L. FOR THIS UNIT.

THE A-WEIGHTED TIME AVERAGED EMISSION SOUND PRESSURE (LEQ) MEASURED AT A HORIZONTAL DISTANCE OF 1 M FROM THE CENTRE OF THE UNIT DOES NOT EXCEED 70 DB(A)

CERTIFIED

**IT IS FORBIDDEN TO BE
UNDER OR IN PROXIMITY OF
THE LOAD!!!**

**PLEASE ENSURE THAT LIFTED
LOAD IS NOT CARRIED OVER
PERSONNEL!!!**

CERTIFIED

2. INSTALLATION INSTRUCTIONS

SEE ILLUSTRATION OF LIFTER

2.1 FITTING BATLIFT

THE UNIT IS FITTED WITH TOPLIFTPOINT/SHACKLE - PLS. NOTE THE FOLLOWING; THE HOOK SIZE SHOULD MATCH THE LIFTING TACKLE
THE LIFTING CAPACITY OF THE GANTRY CRANE SHOULD BE SUFFICIENT FOR THE SUM LOADING OF LIFTER AND LOAD $30 + 300 \text{ KGS} = 330 \text{ KGS}$.

IF THE CAPACITY OF THE LIFTING GEAR IS MUCH HIGHER THAN LIFTER CAPACITY OF THE LIFTER THEN CARE SHOULD BE TAKEN THAT ACCELERATION TIME DOES NOT EXCEED 1 METRE/SEC².

2.2. SUCTION PADS

THE DEVICE IS EQUIPPED WITH 1 OFF 500 X 300 MM MM STEEL SUCTIONPAD - WITH A CAPACITY OF 300 KGS @ MAX VACUUM 60%.


3. DIRECTIONS FOR USE

3.1 GENERAL

THE UNIT IS SUPPLIED WITH A MANUALLY OPERATED CONTROL VALVE SEE UNIT ILLUSTRATION. UNIT IS FITTED WITH AUTOSHUT OFF SWITCH TO SAVE BATTERIES

3.2 OPERATING THE UNIT

SWITCH UNIT ON BY PRESSING THE GREEN OFF/ON SWITCH AS ILLUSTRATED - THE UNIT WILL START IMMEDIATELY - ENSURE THE VALVE IS IN OFF POSITION AS SHOWN (VALVE SLID UP TO TOP POSITION) AND ALLOW VACUUM TO BUILD UP UNTIL THE ALARM STOPS AND THE GREEN LAMP FLASHES.

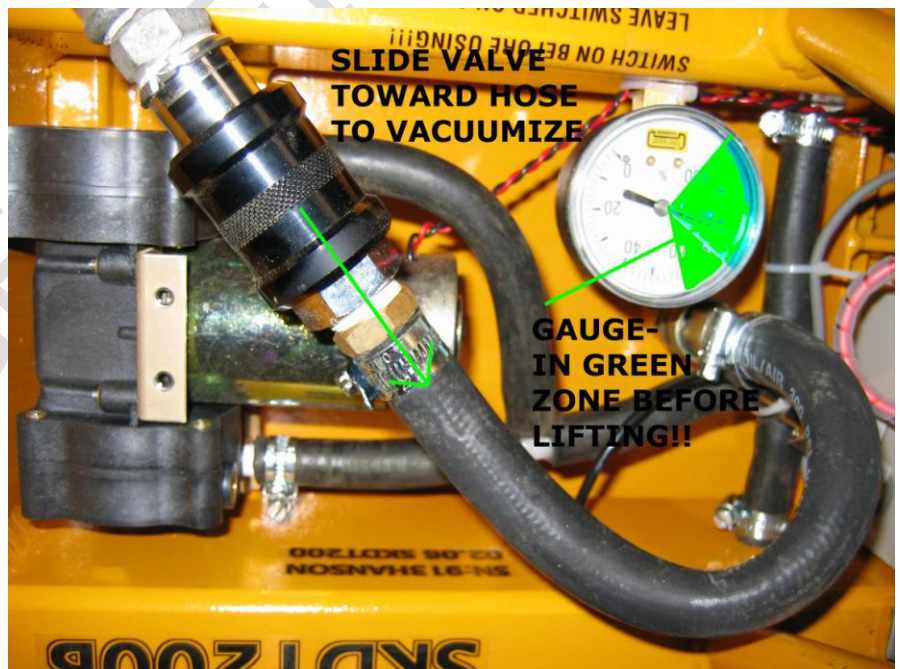

SAFE LIFTING IS ONLY POSSIBLE WHEN THE

LOAD IS CORRECTLY DIVIDED OVER THE SUCTION PAD - THE UNIT SHOULD BE CENTRED ON PANEL TO BE LIFTED. UNIT IS THEN LOWERED ONTO PANEL ENSURING THAT THE PAD DOES NOT OVERLAP MATERIAL BEING LIFTED AND THAT IT IS PRESSED AGAINST PANEL.

TO ACTIVATE CONTROL VALVE - SLIDE SILVER SLIDE VALVE , VACUUMIZATION OF PAD TAKES PLACE WITHIN 1 SECOND. WHEN

RELEASING PANEL/PLATE/SLAB OPERATOR MUST ENSURE THAT IT IS ADEQUATELY SUPPORTED AND HE IS WELL CLEAR OF ANY POSSIBLE MATERIAL SHIFT AFTER DEACTIVATING THE SUCTIONPADS.

BEFORE LIFTING A LOAD PLEASE NOTE THE FOLLOWING:

- A) IS THE UNIT CAPACITY ADEQUATE FOR THE LOAD?**
- B) IS THE LENGTH OF THE LOAD WITHIN 500 MM? AND THE WIDTH WITHIN 300MM**
- C) IS THE SURFACE OF THE PANEL FREE FROM DIRT/SWAF THAT COULD AFFECT SEALING??**
- D) IS THE SURFACE FREE FROM FLAWS/HOLES ETC THAT COULD PREVENT THE PAD FROM SEALING**

IMPORTANT - YOU ARE ONLY ALLOWED TO LIFT A 300 KGS LOAD IF THE VACUUM IS ABOVE 60% AND VK50/30 PAD IS FITTED . MAKE SURE THAT THE VACUUM IS NOT DECREASING WHILST LIFTING - WATCH THE VACUUM GAUGE..

3.3 DISCONNECTING

3.3.1. SWITCHING OFF

TURN THE ISOLATOR SWITCH TO OFF ON UNIT.

CHARGING

ENSURE THAT THE UNIT IS SWITCHED OFF!!!!. PLUG IN THE SUPPLIED CHARGER. THE UNIT IS FITTED WITH AN AUTOMATIC CHARGING SYSTEM AUTOMATICALLY TIMED TO PROVIDE THE CORRECT CHARGE PERIOD.

N.B. WE ACCEPT NO LIABILITY FOR DAMAGE TO GEL BATTERIES OR CHARGING SYSTEM THRU' MISUSE OR UNDER CHARGING. GEL BATTERIES SHOULD BE TREATED AS A CONSUMABLE ITEM AND ARE NOT COVERED BY GUARANTEE.

3.3.2. STORAGE

WHEN UNIT IS NOT BEING USED YOU ARE ADVISED TO KEEP THE SUCTION PADS OFF THE FLOOR WHEN WET.

FOR LONG TERM STORAGE THE BATTERIES SHOULD BE CHARGED ONCE A WEEK WITH ON-BOARD CHARGING SYSTEM AND THE UNIT SHOULD BE STORED IN A DRY ROOM.

4. MAINTENANCE

CHECK RUBBER SEALS FOR LOCALIZED DAMAGE & WEAR. BADLY WORN & DAMAGED SEALS SHOULD BE REPLACED PRIOR TO USE. NEW SEALS CAN BE INSERTED INTO SEAL PROFILE USING INSERT BAR AT AN ANGLE OF 45 DEG.

CHECK THAT ALARM SYSTEM IS OPERATING CORRECTLY(IF FITTED) - WARNING SIREN SHOULD STOP AFTER 60% REACHED IN RESERVOIR(VACUUM GAUGE). IF ALARM IS NOT WORKING IT SHOULD BE REPAIRED IMMEDIATELY.

CHECK THE SUSPENSION POINTS FOR DAMAGE.

4.2 WEEKLY CHECKS

CHECK FILTER ELEMENT ON FILTER BETWEEN RESERVOIR & VALVE IS CLEAN - IF FITTED -IF NECESSARY CLEAN OR RENEW. PARTICULARLY MOIST OR DUSTY ATMOSPHERES WILL REQUIRE MORE FREQUENT ATTENTION.

CHECK INTEGRITY OF AIR FILTER HOUSING.

CHECK LEGIBILITY OF ALL WARNING & INFORMATION LABELS.

CHECK VACUUM RESERVOIR FOR WATER - REMOVE GAUGE AND TURN UPSIDE DOWN.

CHECK FILTER ELEMENT ON VACUUM PUMP(IF FITTED) - IF DIRTY, CLEAN OR EXCHANGE.

CHECK INTEGRITY OF AIR FILTER HOUSING

CHECK LEGIBILITY OF ALL WARNING & INFORMATION LABELS.

4.3. MONTHLY MAINTENANCE

INSPECT SHACKLES & SUSPENSION POINTS EVERY MONTH. WHEN THE CROSS SECTION IS REDUCED BY OVER 10% - THE PARTS SHOULD BE REPLACED IMMEDIATELY

5. TROUBLE SHOOTING

5.1. VACUUM SYSTEM

A. VACUUM PERCENTAGE IS BELOW 60%

**CAUSE: LEAKAGE IN THE VACUUM HOSES OR BADLY APPLIED HOSE CLIPS;
THE SEALS IN THE SUCTION PADS HAVE BEEN DAMAGED;**

THE FILTER IS DIRTY:

THE THREE-WAY VALVE DOES NOT SEAL PROPERLY:

REMEDY: CHANGE THE VACUUM HOSES OR CLIPS:

CHANGE THE SEAL IN THE SUCTION PADS:

CLEAN THE FILTERS:

DEMOUNT THE THREE-WAY VALVE, CLEAN, GREASE, AND THEN REMOUNT IT;

C. THE VACUUM PUMPS ARE TOO HOT OVER 120 C

CAUSE: FILTHY COOLING RIBS IN VACUUM PUMP:

REMEDY: CLEAN THE COOLING RIBS:

B. THE ALARM SYSTEM IS NOT SWITCHED OFF WHEN THE VACUUM PERCENTAGE IS OVER 60%

CAUSE; THE VACUUM SWITCH HAS BEEN DAMAGED:

REMEDY; CHANGE THE VACUUM SWITCH.

5.2. ELECTRICAL SYSTEM

A. THE ELECTRIC MOTORS CANNOT BE STARTED

CAUSE: THE MCB FUSES HAVE TRIPPED OFF:

REMEDY: FIND SHORT CIRCUIT AND CHANGE FUSES:


FIND CAUSE AND RESET THERMAL RELAY.

B. THE ALARM SYSTEM IS NOT SWITCHED OFF AND THE GREEN SYSTEM O.K. LAMP IS NOT ILLUMINATED IF THE VACUUM PERCENTAGE IS OVER 60%



CAUSE: THE VACUUM SWITCH REQUIRES ADJUSTMENT OR HAS BEEN DAMAGED:

REMEDY: ADJUST AS BELOW OR CHANGE THE VACUUM SWITCH.

CERTIFIED

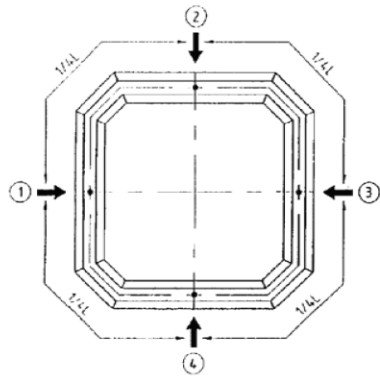

- L = SEAL LENGTH
- PUT GLUED CONNECTION IN A STRAIGHT PART OF THE RAIL PROFILE
- START INSERTING ON 4 POINTS AS INDICATED

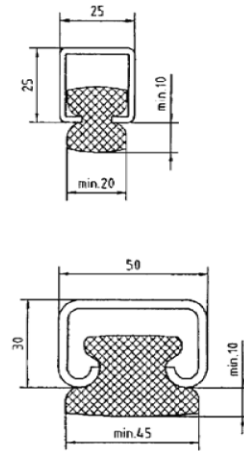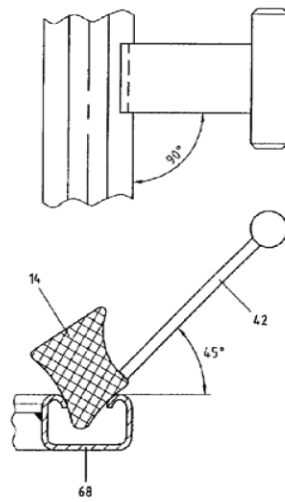

1 - ESKOM/REDY'S/CONRAPH

SUCTION PAD SEAL – CHECK SEAL FOR WEAR AND DAMAGE DAILY USE SEAL INSERT TOOL TO REPLACE IF REQUIRED

PARTS LIST

ITEM	QTY	PART No
FUSEHOLDER current unit	1 OFF	236-5731
PLUG XLR	1 OFF	405-590
SOCKET XLR	1 OFF	405-629
ON/OFF SW PUSH	1 OFF	319-348
BUTTON CAP GREEN	1 OFF	319-382
SPLASHPROOF COVER	1 OFF	266-1887
TERMINAL BLOCK 3 WAY	1 OFF	425-077
RED LEAD	1 OFF	356-1839
BLACK LEAD	1 OFF	356-1845
CONVUM	1 OFF	1/8"
RELAY 10A SPCO	1 OFF	
OMRON G2R 1 T12DC	1 OFF	211-1269
SIREN/STROBE 12Vdc	1 OFF	217-8953
LED GREEN	1 OFF	577-128
PUMP	1 OFF	DDVLC
BATTERY	1	12AH YUASA SEALED
HOSE CONNECTOR FOR 1/2" HOSE	1	795433
VACUUM GAUGE	1 OFF	63VLC

SUCTION PADS

TYPE	: VK50/30-3
QUANTITY	: 1
SERIAL NUMBER	: 1881-1
DIMENSIONS	: 500 X 300 MM
SEAL TYPE	: 40 X 25 MM CODE 088005
SEAL LENGTH	: 1440 MM
LIFTING CAPACITY	: 300 KG @ 60%
SIDELIFTING CAPACITY	: 200 KG @ 60%



TEST CERTIFICATE LIFT EQUIPMENT

DEVICE TYPE : SKDT200B SAFE WORKING LOAD: 300 KGS/200KG SIDELIFT			
PROOF LOAD:	600 KGS/300 KGS SIDELIFT		
SERIAL NO :	1881	PLANT NO:	N/A
SUCTIONPAD :	VK50/30	SAFE WORKING LOAD :	300 KGS
QUANTITY :	1 OFF	PROOF LOAD :	600 KGS
DEAD WEIGHT :	35KG (INCL)	YEAR OF CONSTRUCTION:02.04.14	

INDICATED MAXIMUM LOAD

GOOD

DIMENSIONS OF SUCTIONPADS ACC. TO SPEC	GOOD
MAXIMUM VACUUM %	75%
MAXIMUM VACUUM% (UNDER SUCTION)	75%
VACUUM PERCENTAGE AT SUCTION ACTIVATE	60%
S.W.L. VACUUM LEVEL	60%
SAFETY FACTOR @ S.W.L. VACUUM LEVEL	2
TIMED VACUUM DROP FROM 75%- 30% WITH 300 KG LOAD	BETTER THAN 6 HOURS
TRIAL WITH PROOF LOADPAD	N/A

ABOVE POINTS COPIED CORRECTLY FROM INSPECTION SHEET:

DATE: 02.04.14

PAUL WATSON

M.D.

EC-DECLARATION OF CONFORMITY FOR MACHINERY

(DIRECTIVE 89/392/EEC, ANNEXE II SUB. A)

MANUFACTURER: THE VACUUM LIFTING COMPANY LTD

**LOW TODHILL
ROWALLAN
KILMARNOCK
KA3 2LW**

HEREWITH DECLARES THAT

**THE VACUUM LIFTING DEVICE TYPE SKDT200B SERIAL NO: SN:01881
- IS IN CONFORMITY WITH THE PROVISIONS OF DIRECTIVE 2006/42/EC OF THE
EUROPEAN PARLIAMENT AND OF THE COUNCIL OF 17 MAY 2006
ON MACHINERY, AND AMENDING DIRECTIVE 95/16/EC (RECAST)
PAUL WATSON**



MANAGING DIRECTOR

HEREWITH DECLARES THAT

**THE VACUUM LIFTING DEVICE TYPE SKDT200B SERIAL NO: SN:01881
- IS IN CONFORMITY WITH THE PROVISIONS OF THE LOW VOLTAGE
DIRECTIVE (LVD) 2006/95/EC AND THE EMC DIRECTIVE 2004/108/EC
, AND WITH NATIONAL IMPLEMENTING LEGISLATION:**

JOHN CRAIG

john craig

TECHNICAL MANAGER





Daily Pre-Use Checklist

Stone Lifter

Northern (Head Office) Tel: +44 (0)1482 227333

Central Tel: +44 (0)1302 341659

Southern Tel: +44 (0)203 174 0658

www.hird.co.uk

Machine Model: SK200 Stone Vac Lifter		Site Name:
Date Week Commencing:	Fleet No:	Address:
Inspected by:		

Daily Pre-use Checks		M	T	W	T	F	S	S	COMMENTS
1	Are all operators manuals present and readable								
2	Is the Report of Thorough Examination (LOLER) in date								
3	Complete a visual walk around / Inspection for any noticeable defects								
4	Are all safety information decals present and readable								

Check the following components or areas for damage, or missing parts & unauthorised modifications:

5	Is the lifting attachment free from defects and safe to use								
6	Inspect the vacuum pad for rips, tears, quality and cleanliness								
7	Vacuum pipes and connections (in particular quick release fittings - where applicable)								
8	Electrical components, wiring, connectors,								
9	Check input mains voltage corresponds with charger voltage (110v or 240v)								
10	Charger								
11	Check battery has sufficient charge								
12	Check handles security								
13	Check operation buttons / switches are working and free from defects								
14	Energise vacuum on non porous surface								
15	Are lights and audible alarms on during vacuum process								
16	Does the vacuum reach sufficient level, before switching off (see gauges - where applicable)								
17	Check Safe Working load of vacuum - is it suitable for the proposed load								
18	Carry out full function test								

Is the machine safe to use? (please circle)	YES	YES	YES	YES	YES	YES	YES
	NO	NO	NO	NO	NO	NO	NO
Operator's Initials							

Result of Inspections: List defects or state "No Defects"

Signature:	Name:	Date:
-------------------	--------------	--------------